


ProScale®

SLICK

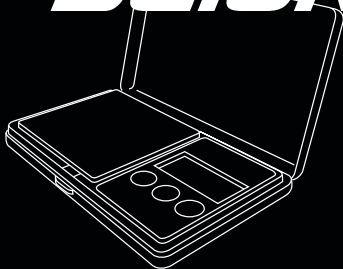

USER MANUAL

Thank you for purchasing the ProScale® Slick digital scale. Please read **all** operating instructions carefully before use. This electronic scale is a precision instrument. With normal care and proper treatment, it will provide years of reliable service.

Never load the scale with more than the maximum capacity. Overloading will permanently damage it! Avoiding any exposure to extreme heat or cold, your scale works better when operated at normal room temperature. Always allow the scale to acclimate to normal room temperature for at least one hour before use. Give your scale sufficient warm up time. Usually 30-60 seconds before calibration to give the internal components a chance to stabilize. Keep your scale in a clean environment. Dust, dirt, moisture, vibration, air currents and a close distance to other electronic equipment can all cause an adverse effect on the reliability and accuracy of your scale. Handle with care. Gently apply all items to be weighed onto tray top. Although this scale is designed to be quite durable, try to avoid rough treatment as this may permanently damage the internal sensor. Avoid shaking, dropping or otherwise shocking the scale. This is a precision instrument and must be handled with extreme care.

OPERATION

1. Place scale on a horizontal flat surface, press [ON/OFF] key to turn on the scale.
2. Wait until "0.0" or "0.00" is displayed.
3. Put the object(s) on the weighing platform.
4. Press [UNITS] key to select a weighing unit.

TARE SETTING

1. Turn on scale as described above.
2. Place the "tare item" on the platform.
3. Press [TARE] and wait until "0.0" is displayed.
4. Add the "net-weight-item".

CALIBRATION

1. Turn on the scale by pressing [ON/OFF] key.
2. Wait until the LCD displays "0.00" and then press and hold [UNITS] key until the "CAL" is displayed, and then release the [UNITS] key.
3. Press [UNITS] key again, the LCD will display the required calibration weight.
4. Place the required calibration weight and wait 3 seconds, the display will show "PASS" and return to normal weighing mode.
5. Calibration is complete.

SPECIFICATIONS

| | |
|--------------------|-------------------------|
| Capacity | 100g |
| Readability | 0.01g |
| Modes | dwt, ozt, ct, gn, oz, g |
| Calibration | 100g |
| Tare Range | Full capacity |
| Auto Off | 60 seconds off |
| Op. Temp | 10 to 30 degree C |
| Power | 2x AAA |
| Scale Dim. | 135mm x 82mm x 20mm |
| Tray | 77mm x 67mm |

DISPLAY ERROR MESSAGES

| | |
|---------------|--|
| [Lo] | Change the batteries |
| [OUE2] | Recalibrate the scale as shown above |
| [O_LD] | You are overloading the scale. Remove the excessive load immediately |
| [UnST] | Use the scale in a more stable position |

ProScale *SLICK*

Manufactured in China - Fabriqué en Chine

www.proscale.net