


# 7001<sup>DX</sup>



ENGLISH

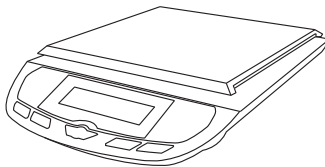

Capacity  
7000g x 1g

15.4lb x 0.1oz

Thank you for purchasing the My Weigh® 7001DX digital scale. Please read all operating instructions carefully before use. This electronic scale is a precision instrument. With normal care and proper treatment, it will provide years of reliable service. For more information please visit [www.myweigh.com](http://www.myweigh.com).

Never load the scale with more than the maximum capacity. Although the 7001DX is designed to be extremely durable with extra overload protection built into the case, overloading will permanently damage it! Avoid any exposure to extreme heat or cold, your scale works better when operated at normal room temperature. Keep your scale in a clean environment. Dust, dirt, moisture, vibration, air currents and/or a close proximity to other electronic equipment can all cause an adverse effect on the reliability and accuracy of your scale. Handle with care. Gently apply all items to be weighed onto tray top. Avoid shaking, dropping or otherwise shocking the scale. Scales are delicate instruments and unlike cellular phones, scales have delicate sensors that determine how much an item weighs. If you drop or shock your scale, these sensors “feel” the shock and are sometimes destroyed. This happens with all digital scales. We design our scales to be as resistant to shock or drops as possible, however there is no way for us to protect 100% against load cell or sensor damage.

Failure to follow these instructions will void your warranty.

Always allow the scale to acclimate to normal room temperature for at least one hour before use. Give your scale sufficient warm up time. Usually 30-60 seconds before calibration to give the internal components a chance to stabilize.

## OPERATION INSTRUCTIONS

### Weighing Procedures

1. Press **⏻** to turn on the scale. When the power is turned on, the scale will countdown for a few seconds and "0" will appear on the display.
2. Select the weighing unit with [UNIT]. Press [UNIT] to select a weighing unit g, kg, oz, lb:oz. Once the unit has been selected, the selected unit will be displayed next to the weight value.
3. Start weighing

### Tare



Tare can be used for eliminating the weight value of an empty container. Place an empty container on the scale and press [TARE]. Then place the items to be weighed in the container. NOTE: When all weight is removed from the weighing tray, the tared value of a container will be displayed as a negative number. Press [TARE] again to return the scale to zero.

## CALIBRATION

---

Calibration may be required when the scale is first set up for use, or if the scale is moved to a different altitude or new location. This is necessary because the weight of a mass in one location is not necessarily the same in another location. Also, with time and use, mechanical deviations can occur.

How to calibrate: \*\*you must have an accurate 5kg weight or combination of weights in order to calibrate\*\*

1. Turn off the scale and put it on a flat, stable surface.
2. Press and hold [UNIT] , then press and release  (keep holding [UNIT] until the scale reads “CALE”).
3. Place the 5kg weight(s) on the platform.
4. Wait a few seconds then press [TARE]. Calibration is complete when the display reads “PASS”, now you can remove the weight(s).
5. Turn the scale OFF  then turn it back ON and check some weight readings. If calibration is still incorrect, repeat calibration.

## BATTERIES

---

Low Batteries & bad battery connections are the #1 cause of scale malfunction and inaccuracy! We test all of our scale returns from consumers and 60% of them are battery related problems. This sounds silly but it's true! A scale will perform poorly when it has low batteries. Use good quality batteries & replace them often (Remove the batteries if you plan to store the scale for longer than 14 days). We include good quality batteries with all of our scales but they can run low in storage. If your scale simply won't turn on while on battery power, it is often caused by loose battery connections. Battery prongs (terminals) are made of metal and they have to be in contact with the batteries. You can use a paperclip to slightly bend the battery prongs to have a better connection. Some poorly designed batteries have recessed or partially obstructed battery terminals. This may cause your prongs to be touching the plastic housing of the battery instead of the metal of the battery terminal.

### Battery installation

- a) Press and lift open the battery cover located at the bottom of the unit.
- b) Insert the batteries and make sure the polarity is correct.
- c) Close the battery cover until it clicks shut.

Note : If the battery symbol appears in the display, it means low battery power. It is time to replace the batteries. If the power is too low, it will show “Lo” when power on and then turn off automatically.

## FEATURES

---

### Power Up Segment Test

When first turning the unit on, the scale will run a quick diagnostic and it will display a countdown . This display will remain for a few seconds and then reset to zero.

### Overload indicator

When the display shows “----”, this indicates an overload. Remove excessive load immediately.  
Remember: you can permanently damage the scale and void your warranty by overloading it!



### Negative Value

Any tared value will be displayed as a negative number once all weight is removed, press [TARE] to re-zero the scale.

### Auto off

An auto shut off feature is provided to conserve battery power. The unit will automatically turn off after 2 minutes (default) of inactivity.


## Auto Off / Backlight/Beep Control

To enter Auto OFF settings; press and hold  and  for 3 seconds and release. Press [UNIT] to toggle "OFF 0" (auto off disabled), "OFF1" (auto off 2mins), "OFF2" (auto off 5mins), to confirm press [TARE]. Next you will enter the Backlight setting; press [UNIT] to toggle "BL 0" (auto backlight off disabled), "BL1" (auto backlight off 1min), "BL2" (auto backlight off 2mins), to confirm press [TARE]. Now you will enter the Beep settings; press [UNIT] to toggle "bb 0" (Beep disable) or "bb1" (Beep enabled), press [TARE] to confirm.

## Hold

Press the [HOLD] to hold current weight reading, press [HOLD] again to cancel.





## Back light

Press  to turn on or off backlight

## SPECIFICATIONS

Capacity	7000g x 1g	Units	kg, g, oz, lb:oz, lb
Auto-OFF	2 mins (default time)		
Scale dimension	8.1" x 6.1" x 1.3" (206mm x 155mm x 33mm)		
Tray dimension	5.9" x 5.4" (150mm x 137mm)		
Scale weight	21.6 oz / 612 g		
Operating temperature	Optimum 10-40°C (50-104°F)		
Power Source	3 x AA Batteries		
Tare range	Up to scale's maximum capacity		

## DISPLAY SYMBOLS

	Scale is in ZERO mode
	Scale is in TARE mode
	Battery is low
	Current reading is stable



[www.myweigh.com](http://www.myweigh.com)